

Container Valve Pressure Gauge 25/42bar NF284004

The Pressure Gauge 40mm 0-60 bar, non-switch gauge, (non-monitoring) can be connect to the cylinder valve via the M10 x 1 port. An optional M10 x 1 port is provided on the other side of the valve so when the cylinder is bracketed to the wall, the valve outlet can be positioned in either direction. Ensure that the unused port is sealed with a blanking plug.

When fitting the pressure gauge, screw it into the port until it stops (finger tight) and then turn back, if necessary for a maximum of one revolution for correct orientation of the gauge dial.

Before screwing in the gauge check to see that the 'O'-ring seal and back-up ring are not damaged. If 'O'-ring replacement is required note the installation diagram, (detail Z) shown below.

