

Solenoid Actuator – Monitoring switch Multiple Part Numbers

Some end users have indicated a concern that the Electric Actuators could be removed or not fitted on systems. There is no evidence that any of our customers have experienced this problem and our system training ensures that all trained installers know how the system is correctly installed and maintained. This request may be influenced by some of the approval authorities in the USA requiring this feature. We reiterate that we have no evidence for the need for this facility but we have a product which will provide this warning.

To provide a facility to continuously monitor the fitment of the Solenoid Actuator. Use the slave discharge valve and the Solenoid Actuator NF26010A (includes reset tool and manual release)

Features

- Fits both sizes of chemical discharge valve
- Simple to install
- May be retrofitted
- M20 x 1.5 cable entry (1.5 mm² to 2.5 mm² cables)



Part Number	Description
NF263301	Solenoid Actuator – Monitoring switch 33mm valve
NF264901	Solenoid Actuator – Monitoring switch 49mm valve

Installation

Wire through the ‘normally closed’ contacts when fitted in series with the Actuator. Make the connections in the junction box. The removal of the actuator will cause an open circuit fault on the control panel actuator monitoring circuit.